


## Copper Busbar

Get your product according to your specifications and in a shorter time than ever before.

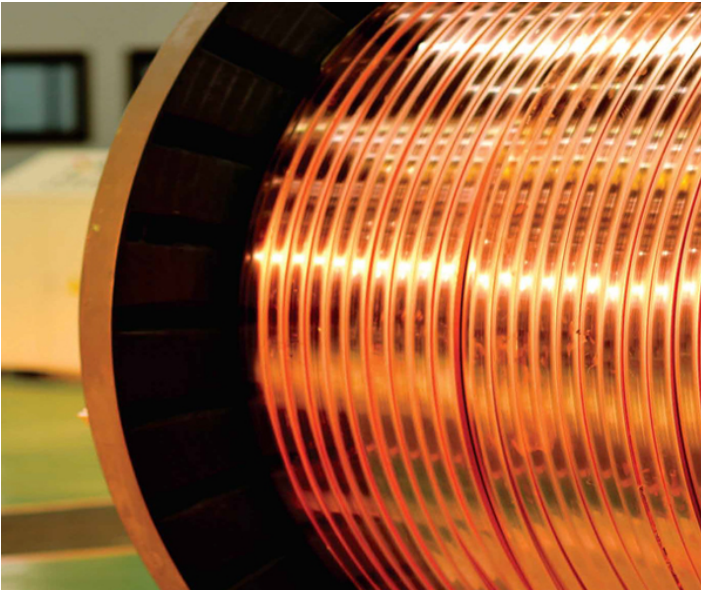

### Busbar

ITEM	SPECIFICATIONS
Copper Purity	99.99%
Size RangeThicknessWidth	-3 – 16 mm10 – 200mm
Condition	Soft / Half Hard / Full Hard
Electrical Conductivity (% IACS)	101%
Standards	As per ASTM B187
Tin Plating	1 -20 Microns
Packaging	Cutl to 3 and 4 meters length, packed on ballets

Nuhas copper busbar complies with international standards of 99.99% purity and 101% IACS. Oxygen Free Copper removes the potential for hydrogen embrittlement. Busbars are often worked hard, which can lead to pin-holing or cracking being apparent on the bent edge. Nuhas OFC does not suffer from this weakness. Oxygen Free Copper busbar is the right product for demanding projects.