



Bedienungsanleitung User Manual

Schallmesskoffer | Decibel Meter Kit PCE-4XX-EKIT



User manuals in various languages (français, italiano, español, português, nederlands, türk, polski, русский, 中文) can be found by using our product search on: www.pce-instruments.com

Letzte Änderung / last change: 8 October 2019
v1.0



Deutsch Inhaltsverzeichnis

1	Sicherheitsinformationen.....	1
2	Einleitung.....	2
3	Lieferumfang.....	2
4	Spezifikationen.....	2
5	Gerätebeschreibung.....	3
6	Messsystem aufbauen.....	4
7	Akkus wiederaufladen.....	5
8	Garantie.....	5
9	Entsorgung.....	5

English

Contents

1	Safety notes	6
2	Introduction	7
3	Delivery contents	7
4	Specifications	7
5	Device description	8
6	Installing the measuring system	9
7	Recharging the batteries	10
8	Warranty	10
9	Disposal	10



1 Sicherheitsinformationen

Bitte lesen Sie dieses Benutzer-Handbuch sorgfältig und vollständig, bevor Sie das Gerät zum ersten Mal in Betrieb nehmen. Die Benutzung des Gerätes darf nur durch sorgfältig geschultes Personal erfolgen. Schäden, die durch Nichtbeachtung der Hinweise in der Bedienungsanleitung entstehen, entbehren jeder Haftung.

- Dieses Messgerät darf nur in der in dieser Bedienungsanleitung beschriebenen Art und Weise verwendet werden. Wird das Messgerät anderweitig eingesetzt, kann es zu gefährlichen Situationen kommen.
- Verwenden Sie das Messgerät nur, wenn die Umgebungsbedingungen (Temperatur, Luftfeuchte, ...) innerhalb der in den Spezifikationen angegebenen Grenzwerte liegen. Setzen Sie das Gerät keinen extremen Temperaturen, direkter Sonneneinstrahlung, extremer Luftfeuchtigkeit oder Nässe aus.
- Setzen Sie das Gerät keinen Stößen oder starken Vibrationen aus.
- Das Öffnen des Gerätegehäuses darf nur von Fachpersonal der PCE Deutschland GmbH vorgenommen werden.
- Benutzen Sie das Messgerät nie mit nassen Händen.
- Es dürfen keine technischen Veränderungen am Gerät vorgenommen werden.
- Das Gerät sollte nur mit einem Tuch gereinigt werden. Verwenden Sie keine Scheuermittel oder lösungsmittelhaltige Reinigungsmittel.
- Das Gerät darf nur mit dem von der PCE Deutschland GmbH angebotenen Zubehör oder gleichwertigem Ersatz verwendet werden.
- Überprüfen Sie das Gehäuse des Messgerätes vor jedem Einsatz auf sichtbare Beschädigungen. Sollte eine sichtbare Beschädigung auftreten, darf das Gerät nicht eingesetzt werden.
- Das Messgerät darf nicht in einer explosionsfähigen Atmosphäre eingesetzt werden.
- Der in den Spezifikationen angegebene Messbereich darf unter keinen Umständen überschritten werden.
- Wenn die Sicherheitshinweise nicht beachtet werden, kann es zur Beschädigung des Gerätes und zu Verletzungen des Bedieners kommen.
- Entfernen Sie die Batterien, wenn das Gerät länger als 60 Tage nicht verwendet wird.
- Schalten Sie das Gerät aus, wenn es nicht verwendet wird.

Für Druckfehler und inhaltliche Irrtümer in dieser Anleitung übernehmen wir keine Haftung.

Wir weisen ausdrücklich auf unsere allgemeinen Gewährleistungsbedingungen hin, die Sie in unseren Allgemeinen Geschäftsbedingungen finden.

Bei Fragen kontaktieren Sie bitte die PCE Deutschland GmbH. Die Kontaktdaten finden Sie am Ende dieser Anleitung.

2 Einleitung

Das Zusatzkit für die Outdoor Schallmessung PCE-4xx-EKIT ist mit den Schallpegelmessgeräten PCE-428, PCE-430 und PCE-432 kombinierbar. Dieses Kit ermöglicht es, den Außenlärm mit einem Schallpegelmessgerät über einen langen Zeitraum zu messen. Das Außenlärm Schallmesskit besteht aus einem wasserfesten Peli-Transportkoffer mit Rollen mit weiterem Zubehör. In diesem Koffer sind ein Ladegerät und zwei zusätzliche Bleigelakkus verbaut, die einen Betrieb des Schallpegelmessers von bis zu 10 Tagen ermöglichen. Während der Outdoor Schallmessung kann der Koffer geschlossen bleiben. Durch die außenliegenden Anschlüsse für das Mikrofon und die Spannungsversorgung sind alle elektronischen Komponenten vor Wasser geschützt.

3 Lieferumfang

- 1 x Wasserdichter PELI Transportkoffer
- 1 x Wind und Regenschutz für Mikrofon der PCE-4xx Serie
- 1 x Ladegerät für interne Akkus
- 2 x 12 V Blei-Gel Akkus
- 1 x Stativ
- 1 x 2 m Mikrofonleitung
- 1 x Anschlussleitung für Spannungsversorgung (Wahlweise Schuko oder US Anschluss)

4 Spezifikationen

Transportkoffer	PELI 1510 mit Rollen
Schutzart	IP65
Anschlüsse am Koffer	Mikrofon: TNC
	12 V Ladespannung: XLR
	110 V / 230 V Ladespannung: PowerCon TRU
Ladegerät	Victron Blue Smart 12 V / 4 A IP65
Interne Akkus	2 x 12 V / 12 Ah Bleigel
Batterielaufzeit	min. 10 Tage
Spannungsversorgung	Mit Ladegerät EU Version: 180 ... 265 V AC
	Mit Ladegerät US Version: 100 ... 130 V AC
	Akkubetrieb: 2 x 12 V / 12 Ah
Kabellänge	Mikrofonkabel: 2 m mit TNC Verbinder
	Spannungsversorgung: 2 m mit PowerCon TRU
Abmessungen	56 x 35 x 23 cm
Gewicht	ca. 14 kg mit Akkus
	ca. 8 kg ohne Akkus

5 Gerätebeschreibung

Deutsch





6 Messsystem aufbauen

Um das Messsystem aufzubauen, gehen Sie wie folgt vor:

Bauen Sie zunächst das Stativ auf. Führen Sie anschließend das Messsignalkabel durch die Mikrofonhalterung. Verbinden Sie nun das Mikrofon mit dem Messsignalkabel und verschrauben Sie das Mikrofon mit der Mikrofonhalterung. Verschrauben Sie dann die Mikrofonhalterung mit dem Stativ.

Verbinden Sie nun über den Anschluss „Messsignaleingang“ das Messsignalkabel mit dem Messkoffer. Im letzten Schritt verbinden Sie nun im Koffer die Messleitung und das Kabel für die Spannungsversorgung mit Ihrem Schallmessgerät.

Hinweis: Achten Sie immer darauf, dass das Mikrofon senkrecht steht. Andernfalls kann es zu Beschädigungen durch Verwitterung kommen.



7 Akkus wiederaufladen

Die Akkus können Sie je nach Belieben aufladen. Hierbei gibt es zwei Methoden.

Erste Methode

Bei der ersten Methode ist das Ladegerät direkt im Messkoffer verbaut. Schließen Sie dazu das Ladegerät an die Spannungsversorgung und an die Batterieversorgung innerhalb des Koffers an. Das mitgelieferte Versorgungskabel schließen Sie außerhalb des Messkoffers an.

Zweite Methode

Bei der zweiten Methode ist das Ladegerät außerhalb des Messkoffers. Diese Methode sollten Sie anwenden, wenn die Innentemperatur des Messkoffers 50 °C übersteigen könnte. Sollte die Innentemperatur zu hoch sein, könnte sich das Ladegerät wegen Überhitzung automatisch abschalten.

Schließen Sie das Ladegerät an den Ladegerätanschluss außerhalb des Messkoffers an. Schließen Sie nun das mitgelieferte Versorgungskabel direkt an das Ladegerät an.

Durch die verschiedenen Bauformen der Stecker ist es nicht möglich, das Ladegerät falsch anzuschließen.

8 Garantie

Unsere Garantiebedingungen können Sie in unseren Allgemeinen Geschäftsbedingungen nachlesen, die Sie hier finden: <https://www.pce-instruments.com/deutsch/agb>.

9 Entsorgung

HINWEIS nach der Batterieverordnung (BattV)

Batterien dürfen nicht in den Hausmüll gegeben werden: Der Endverbraucher ist zur Rückgabe gesetzlich verpflichtet. Gebrauchte Batterien können unter anderem bei eingerichteten Rücknahmestellen oder bei der PCE Deutschland GmbH zurückgegeben werden.

Annahmestelle nach BattV:

PCE Deutschland GmbH
Im Langel 4
59872 Meschede

Zur Umsetzung der ElektroG (Rücknahme und Entsorgung von Elektro- und Elektronikgeräten) nehmen wir unsere Geräte zurück. Sie werden entweder bei uns wiederverwertet oder über ein Recyclingunternehmen nach gesetzlicher Vorgabe entsorgt. Alternativ können Sie Ihre Altgeräte auch an dafür vorgesehenen Sammelstellen abgeben.

WEEE-Reg.-Nr.DE69278128



Alle PCE-Produkte sind CE
und RoHs zugelassen.

1 Safety notes

Please read this manual carefully and completely before you use the device for the first time. The device may only be used by qualified personnel and repaired by PCE Instruments personnel. Damage or injuries caused by non-observance of the manual are excluded from our liability and not covered by our warranty.

- The device must only be used as described in this instruction manual. If used otherwise, this can cause dangerous situations for the user and damage to the meter.
- The instrument may only be used if the environmental conditions (temperature, relative humidity, ...) are within the ranges stated in the technical specifications. Do not expose the device to extreme temperatures, direct sunlight, extreme humidity or moisture.
- Do not expose the device to shocks or strong vibrations.
- The case should only be opened by qualified PCE Instruments personnel.
- Never use the instrument when your hands are wet.
- You must not make any technical changes to the device.
- The appliance should only be cleaned with a damp cloth. Use only pH-neutral cleaner, no abrasives or solvents.
- The device must only be used with accessories from PCE Instruments or equivalent.
- Before each use, inspect the case for visible damage. If any damage is visible, do not use the device.
- Do not use the instrument in explosive atmospheres.
- The measurement range as stated in the specifications must not be exceeded under any circumstances.
- Non-observance of the safety notes can cause damage to the device and injuries to the user.
- Remove the batteries when the meter is not used for more than 60 days.
- Turn off the meter when not in use.

We do not assume liability for printing errors or any other mistakes in this manual.

We expressly point to our general guarantee terms which can be found in our general terms of business.

If you have any questions please contact PCE Instruments. The contact details can be found at the end of this manual.



2 Introduction

The kit for outdoor noise measurement PCE-4xx-EKIT is combinable with the noise meters PCE-428, 430 and PCE-432. This outdoor kit makes it possible to measure outdoor noise with an SPL level meter over a longer period of time. The environmental noise monitoring system comes in a a waterproof Peli carrying case with rollers. A charger and two additional lead gel batteries are installed in this case, which allows operation for up to 10 days. During the outdoor noise measurement, the case can remain closed. Due to the external connections for the microphone and the power supply, all electronic components are protected from water.

3 Delivery contents


- 1 x Outdoor Sound Monitor Kit PCE-4xx-EKIT
- 1 x Waterproof PELI transport case
- 1 x Wind and rain protection for microphone of the PCE-4xx series
- 1 x Charger for internal batteries
- 2 x 12 V lead gel batteries
- 1 x Tripod
- 1 x 2 m / 6ft 6" microphone cable
- 1 x Connection cable for power supply 110 V / 230 V (optional Schuko or US connection)

4 Specifications

Carrying case	PELI 1510 with rollers with grid foam
Protection	IP65
Connections on the suitcase	Microphone: TNC 12 V charging voltage: XLR 110 V / 230 V charging voltage: PowerCon TRU
Charger	Victron Blue Smart 12 V / 4 A IP65
Internal batteries	2 x 12 V / 12 Ah lead gel
Battery running time	min. 10 days
Power supply	With charger EU Version: 180 ... 265 V AC With charger US Version: 100 ... 130 V AC Battery operation: 2 x 12 V / 12 Ah
Cable length	Microphone cable: 2 m / 6 ft 6" with TNC connector Power supply: 2 m / 6 ft 6" with PowerCon TRU
Dimensions	56 x 35 x 23 cm / 2.2 x 1.3 x 0.9"
Weight	about 14 kg / 30 lb 13 oz with batteries about 8 kg / 17 lb 10 oz without batteries

5 Device description



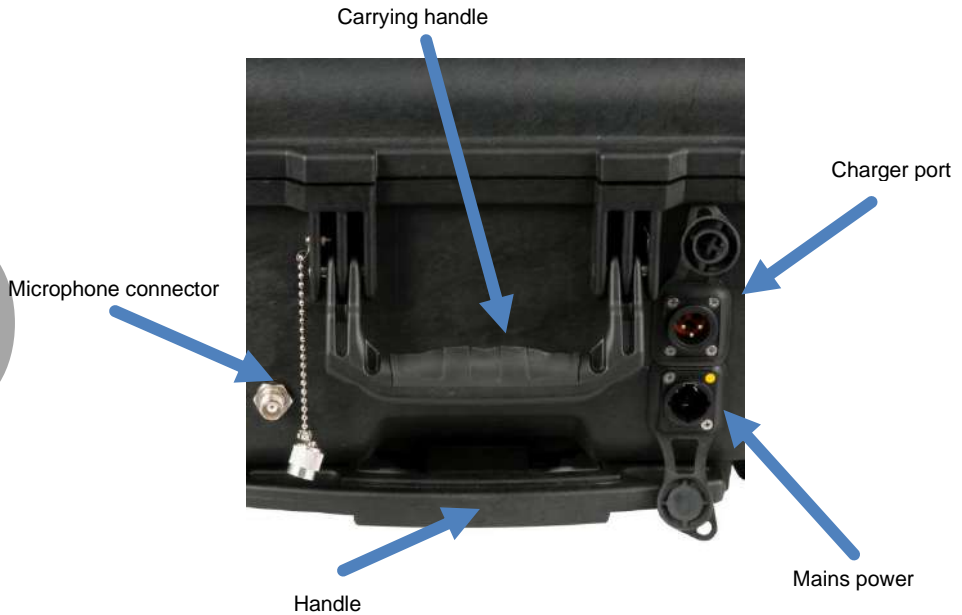

6 Installing the measuring system

First unfold the tripod. Then guide the measurement signal cable through the microphone holder. Now connect the microphone to the measurement signal cable and screw the microphone onto its holder. Then screw the microphone holder onto the tripod.

Use the measurement signal input to connect the measurement signal cable to the measuring case. Finally connect the measuring cable and the power supply cable to your sound level meter in the case.

Note:

Always ensure vertical position of the microphone. Otherwise, damage through weathering may occur.

7 Recharging the batteries

There are two methods to charge the batteries.

First method

If you wish to charge the batteries with the charger directly installed in the case, connect the charger to the voltage supply and to the battery supply within the case. Connect the included supply cable outside the measuring case.

Second method

When the temperature within the measuring case could possibly exceed 50 °C, it is recommended to use the charging method with the charger outside the case to avoid overheating which can cause the charger to turn off automatically.

Connect the charger to the charger port outside the measuring case. Now connect the included supply cable to the charger directly.

The different shapes of the plugs do not allow incorrect connection of the charger.

8 Warranty

You can read our warranty terms in our General Business Terms which you can find here: <https://www.pce-instruments.com/english/terms>.

9 Disposal

For the disposal of batteries in the EU, the 2006/66/EC directive of the European Parliament applies. Due to the contained pollutants, batteries must not be disposed of as household waste. They must be given to collection points designed for that purpose.

In order to comply with the EU directive 2012/19/EU we take our devices back. We either re-use them or give them to a recycling company which disposes of the devices in line with law.

For countries outside the EU, batteries and devices should be disposed of in accordance with your local waste regulations.

If you have any questions, please contact PCE Instruments.





PCE Instruments contact information

Germany

PCE Deutschland GmbH
Im Langel 4
D-59872 Meschede
Deutschland
Tel.: +49 (0) 2903 976 99 0
Fax: +49 (0) 2903 976 99 29
info@pce-instruments.com
www.pce-instruments.com/deutsch

Germany

PCE Produktions- und
Entwicklungsgesellschaft mbH
Im Langel 26
D-59872 Meschede
Deutschland
Tel.: +49 (0) 2903 976 99 471
Fax: +49 (0) 2903 976 99 9971
info@pce-instruments.com
www.pce-instruments.com/deutsch

The Netherlands

PCE Brookhuis B.V.
Institutenweg 15
7521 PH Enschede
Nederland
Telefoon: +31 (0)53 737 01 92
info@pcebenelux.nl
www.pce-instruments.com/dutch

United States of America

PCE Americas Inc.
711 Commerce Way suite 8
Jupiter / Palm Beach
33458 FL
USA
Tel: +1 (561) 320-9162
Fax: +1 (561) 320-9176
info@pce-americas.com
www.pce-instruments.com/us

France

PCE Instruments France EURL
23, rue de Strasbourg
67250 Soultz-Sous-Forêts
France
Téléphone: +33 (0) 972 3537 17
Numéro de fax: +33 (0) 972 3537 18
info@pce-france.fr
www.pce-instruments.com/french

United Kingdom

PCE Instruments UK Ltd
Unit 11 Southpoint Business Park
Ensign Way, Southampton
Hampshire
United Kingdom, SO31 4RF
Tel: +44 (0) 2380 98703 0
Fax: +44 (0) 2380 98703 9
info@pce-instruments.co.uk
www.pce-instruments.com/english

China

PCE (Beijing) Technology Co., Limited
1519 Room, 6 Building
Zhong Ang Times Plaza
No. 9 Mentougou Road, Tou Gou District
102300 Beijing, China
Tel: +86 (10) 8893 9660
info@pce-instruments.cn
www.pce-instruments.cn

Turkey

PCE Teknik Cihazları Ltd.Şti.
Halkalı Merkez Mah.
Pehlivan Sok. No.6/C
34303 Küçükçekmece - İstanbul
Türkiye
Tel: 0212 471 11 47
Faks: 0212 705 53 93
info@pce- cihazlari.com.tr
www.pce-instruments.com/turkish

Spain

PCE Ibérica S.L.
Calle Mayor, 53
02500 Tobarra (Albacete)
España
Tel. : +34 967 543 548
Fax: +34 967 543 542
info@pce-iberica.es
www.pce-instruments.com/espanol

Italy

PCE Italia s.r.l.
Via Pesciatina 878 / B-Interno 6
55010 Loc. Gragnano
Capannori (Lucca)
Italia
Telefono: +39 0583 975 114
Fax: +39 0583 974 824
info@pce-italia.it
www.pce-instruments.com/italiano

Hong Kong

PCE Instruments HK Ltd.
Unit J, 21/F., COS Centre
56 Tsun Yip Street
Kwun Tong
Kowloon, Hong Kong
Tel: +852-301-84912
jyi@pce-instruments.com
www.pce-instruments.cn

User manuals in various languages (français, italiano, español, português, nederlands, türk, polski, русский, 中文) can be found by using our product search on: www.pce-instruments.com

Specifications are subject to change without notice.





Interface protocol

Sound Meter PCE-428 / PCE-430 / PCE-432



User manuals in various languages (français, italiano, español, português, nederlands, türk, polski, русский , 中文) can be found by using our product search on: www.pce-instruments.com

Last change: 12 December 2017
v1.0



Contents

1	Instruction Format	1
2	Instruction Description.....	2
3	Instructions.....	2
3.1	IDXp1: Setup ID	2
3.2	IDX?: Query ID.....	3
3.3	BRTp1: Set the RS-232 Baud Rate	3
3.4	BRT?: Query The RS-232 Baud Rate Setting	4
3.5	XONp1: Set the Flow Control.....	4
3.6	XON?: Query Flow Control Setting	5
3.7	RETp1: Set Response Mode	5
3.8	RET?: Query Response Mode Setting	6
3.9	MEMp1: Set the Measurement Mode.....	6
3.10	MEM?: Query Measurement Mode Setting	7
3.11	CALp1: Set Calibration Level and Calibrate by Measurement	7
3.12	CAL?: Query Calibration Level and Calibration Factor	8
3.13	CAFP1: Calibrate by Calibration Factor.....	8
3.14	CAF?: Query Calibration History.....	9
3.15	BSEp1_p2_p3_p4_p5_p6_p7: Measurement Setup	10
3.16	BSE?: Query Measurement Setup.....	11
3.17	RNS?: Query Measurement Range	11
3.18	ICPp1: Set ICCP Power.....	12
3.19	ICP?: Query ICCP Power State	12
3.20	PR1p1_p2_p3_p4: Set Profile1	13
3.21	PR1?: Query Profile1 Setting.....	13
3.22	PR2p1_p2_p3_p4: Set Profile2	13
3.23	PR2?: Query Profile2 Setting	14
3.24	PR3p1_p2_p3_p4: Set Profile3	14
3.25	PR3?: Query Profile3 Setting	14
3.26	ALMp1: Set Alarm Threshold.....	14
3.27	ALM?: Query the Alarm Threshold Setting	14
3.28	ETFP1_p2_p3_p4_p5: Set Extended Function.....	15

3.29	ETF?: Query Extended Function Setting.....	15
3.30	STSp1_p2_p3.....p11_p12: Set Statistical.....	16
3.31	STS?: Query Statistical.....	16
3.32	HISp1_p2: Set Time History	17
3.33	HIS?: Query Time History Setting	17
3.34	OCSp1_p2.....p13_p14: Set Octave Setting.....	18
3.35	OCS?: Query Octave Setting.....	19
3.36	CUSp1_p2_p3_p4: Set Custom Measure	20
3.37	CUSp1_?: Query Custom Measure Setting.....	20
3.38	TISp1_p2_p3_p4_p5: Set Timer	21
3.39	TIS?: Query Timer Setting	22
3.40	CONp1: Set Contrast.....	22
3.41	CON?: Query Contrast Setting	22
3.42	BLTp1_p2: Set Backlight.....	22
3.43	BLT?: Query Backlight Setting	23
3.44	BAT?: Query Battery State.....	24
3.45	TRGp1: Set Trigger	24
3.46	TRG?: Query Trigger Setting	25
3.47	DATp1_p2_p3_p4: Set Date	25
3.48	DAT?: Query Date Setting.....	26
3.49	HORp1_p2_p3: Set Time	26
3.50	HOR?: Query Time Setting.....	26
3.51	PWOp1: Set Auto Power Off.....	27
3.52	PWO?: Query Auto Power Off Setting.....	27
3.53	OPMp1: Set Boot Mode.....	28
3.54	OPM?: Query Boot Mode Setting.....	28
3.55	UMDp1: Set USB Mode.....	29
3.56	UMD?: Query USB Mode Setting.....	29
3.57	GPDp1_p2: Set GPS.....	30
3.58	GPD?: Query GPS Setting.....	30
3.59	VER?: Query About Information.....	31
3.60	LNGp1: Set Language.....	31
3.61	LNG?: Query Language Setting.....	32
3.62	OUTp1_p2_p3_p4: Set Output	32



3.63	OUT?: Query Output Setting.....	33
3.64	RES: Apply Factory Settings.....	33
3.65	STAp1: Start / Stop Measurement.....	33
3.66	STA?: Query Measurement State	34
3.67	DMAp1_?: Query the Main Screen Data	35
3.68	TPRp1_?: Query 3-Profile Screen Data	35
3.69	DLNp1_?: Query Statistical Analysis Data (LN).....	36
3.70	DCU?: Query Custom Measure Data	37
3.71	DSLp1_p2_?: Query All the Data of the Sound Level Meter	38
3.72	DOT?: Query 1/1 Octave Band Data	39
3.73	DTT?: Query 1/3 Octave Band Data	40
3.74	CSD: Save Custom Data into MicroSD	41

1 Instruction Format

In this section, “□□□” on behalf of the 3 characters of the instruction, “p1, p2 ……” on behalf of the parameter “d1, d2 …” means the data, “_” means a space.

(1) Separate The Parameters By Space For Multiple Parameters In One Instruction:

- Instruction without parameters
- p1 Instruction with 1 parameter
- p1_p2 Instruction with 2 parameters
- ? Instruction with query parameter
- p1_? Instruction with 1 parameter and a query parameter
- p1_p2_? Instruction with 2 parameters and a query parameter

The parameters can be a wide range, for example from 1 to 255. These parameters are sending by the format of ASCII. Therefore, you may need to send 1~3 bytes.

- 93 Parameter is 93
- 124 Parameter is 124

Note that both of 93 and 124 are single parameter. So the individual numbers don't need to be separated by spaces.

- 1_64 2 individual parameters, 1 and 64

Note that 1 and 64 are two parameters in one instruction. So those parameters need to be separated by space.

The parameter is possible to be decimal or integer type. However, if the actual value is integer type, decimal point and decimal bits can be omitted.

(2) Separate The Data By Comma For Multiple Data In One Response

- d1,d2,d3 Return 3 data

Response block, the data bits actually returned is less than its maximum possible number of digits, leading zeros. For example, return 2 data with the maximum possible value 255 (3 digits), and the actually data is 76 and 9, the response is:

- 076,009 Return data 76 and 9

If the returned data contains date and time, use the slash “/” to separate data and use the colon “:” to separate the time:

2011/08/05, 12:13:55



2 Instruction Description

Note in This Section:

- In the following description, the value, range and default value of parameter are show as ASCII code.
- The default value means the sound level meter just delivery to user or restore to the factory settings.

3 Instructions

3.1 IDXp1: Setup ID

ID of sound level meters in one network must be different. Otherwise, there will be a communication error.

Note: When the IDX instruction is correctly received by sound level meter, ACK signal will be returned with the new ID.

	Instruction			Parameters
Explanation	IDX			p1: ID number; Range: 1~255; Default: 1
ASCII	I	D	X	1
Hex	49H	44H	58H	31H
Byte	1	1	1	1~3
Return	ACK / NAK			

Example 1: set the ID as 3.

```
02 01 43 49 44 58 33 03 25 0D 0A
```

Return: ACK. Note where ID has been changed to 3 (03H).

```
02 03 06 03 040D 0A
```

Example 2: set the ID as 255.

```
02 01 43 49 44 58 32 35 35 03 24 0D 0A
```

Return: ACK. Note where ID has been changed to 255 (FFH).

```
02 FF 06 03 F8 0D 0A
```

3.2 IDX?: Query ID

	Instruction			Parameters
Explanation	IDX			Query parameter: ?
ASCII	I	D	X	?
Hex	49H	44H	58H	3FH
Byte	1	1	1	1
Return	Return the current ID number			

Example: query ID.

```
02 01 43 49 44 58 3F 03 29 0D 0A
```

Return: the current ID 001.

```
02 01 41 30 30 31 03 70 0D 0A
```

3.3 BRTp1: Set the RS-232 Baud Rate

Note: When the BRT instruction is correctly received by the sound level meter, it will return the ACK by previous baud rate, and then update the baud rate.

	Instruction			Parameters
Explanation	BRT			p1: RS-232 baud rate; 2=4800bps; 3=9600bps; 4=19200bps; Default: 3
ASCII	B	R	T	3
Hex	42H	52H	54H	33H
Byte	1	1	1	1
Return	ACK / NAK			

Example: set the baud rate to 9600bps.

```
02 01 43 42 52 54 33 03 34 0D 0A
```

Return: ACK.

```
02 01 06 03 06 0D 0A
```

3.4 BRT?: Query The RS-232 Baud Rate Setting

	Instruction			Parameters
Explanation	BRT			Query parameter: ?
ASCII	B	R	T	?
Hex	42H	52H	54H	3FH
Byte	1	1	1	1
Return	Return the current baud rate			

Example: query the current baud rate.

02 01 43 **42 52 54 3F** 03 38 0D 0A Return:

the current baud rate is 9600bps.

02 01 41 **33** 03 72 0D 0A

3.5 XONp1: Set the Flow Control

	Instruction			Parameters
Explanation	XON			p1: Flow control mode; 0=Hardware flow control; 1=Software flow control; Default: 1
ASCII	X	O	N	1
Hex	58H	4FH	4EH	31H
Byte	1	1	1	1
Return	ACK / NAK			

Example: set to software flow control mode.

02 01 43 **58 4F 4E 31** 03 2B 0D 0A

Return: ACK.

02 01 06 03 06 0D 0A

3.6 XON?: Query Flow Control Setting

	Instruction			Parameters
Explanation	XON			Query parameter: ?
ASCII	X	O	N	?
Hex	58H	4FH	4EH	3FH
Byte	1	1	1	1
Return	Return flow control mode			

Example: query flow control mode.

```
02 01 43 58 4F 4E 3F 03 25 0D 0A
```

Return: the current flow control mode is software flow control.

```
02 01 41 31 03 70 0D 0A
```

3.7 RETp1: Set Response Mode

Response means the ACK / NAK signal returned from the sound level meter (HIS and OCS instruction returns MicroSD card state or NAK). User can enable or disable such a response.

Note: RET instruction itself is not affected by response mode. When the sound level meter receive the RET instruction, it will return ACK/NAK whether the current state is enabled or disabled. RET? Query command is also not subject to the influence of response mode.

	Instruction	Parameters
Explanation	RET	p1: Response mode; 0=Disabled; 1=Enabled;

	Instruction			Parameters
	R	E	T	Default: 1
ASCII	R	E	T	1
Hex	52H	45H	54H	31H
Byte	1	1	1	1
Return	ACK / NAK			

Example: set to enable response.

```
02 01 43 52 45 54 31 03 31 0D 0A
```

Return: ACK.

```
02 01 06 03 06 0D 0A
```

3.8 RET?: Query Response Mode Setting

	Instruction			Parameters
Explanation	RET			Query parameter: ?
ASCII	R	E	T	?
Hex	52H	45H	54H	3FH
Byte	1	1	1	1
Return	Return response mode			

Example: query response mode.

```
02 01 43 52 45 54 3F 03 3F 0D 0A
```

Return: the current response mode is to enable the response.

```
02 01 41 31 03 70 0D 0A
```

3.9 MEMp1: Set the Measurement Mode

When MEM instruction is correctly received by the sound level meter, it will switch to the main screen of the octave mode or the main screen of level meter mode according to the corresponding parameter in instruction.

☆ **Note** The 1/3 octave band is optional function.

	Instruction			Parameters
Explanation	MEM			p1: Measurement mode; 0=1/1Octave; 1=Level meter mode; 2=1/3 Octave (Optional); Default: 1
ASCII	M	E	M	1
Hex	4DH	45H	4DH	31H
Byte	1	1	1	1
Return	ACK / NAK			

Example: set the sound level meter mode.

```
02 01 43 4D 45 4D 31 03 37 0D 0A
```

Return: ACK.

```
02 01 06 03 06 0D 0A
```

3.10 MEM?: Query Measurement Mode Setting

	Instruction			Parameters
Explanation	MEM			Query parameter: ?
ASCII	M	E	M	?
Hex	4DH	45H	4DH	3FH
Byte	1	1	1	1
Return	Return the measurement mode			

Example: query the measurement mode.

```
02 01 43 4D 45 4D 3F 03 39 0D 0A
```

Returns: the current measurement mode is level meter mode.

```
02 01 41 31 03 70 0D 0A
```

3.11 CALp1: Set Calibration Level and Calibrate by Measurement

Note: When CAL instruction is correctly received by the sound level meter, two ACK will be returned at the beginning and the end of the calibration (several seconds will be spent by the calibration). In the calibration history, ending with symbol **M** indicate the record was calibrate by the method of by Measurement.

	Instruction			Parameters
Explanation	CAL			p1: Calibration level; Range: 0~199.9; Default: 93.8
ASCII	C	A	L	93.8
Hex	43H	41H	4CH	39H, 33H, 2EH, 38H
Byte	1	1	1	1~5
Return	ACK / NAK			

Example 1: set the calibration level as 94dB and calibrate by measurement.

```
02 01 43 43 41 4C 39 34 03 00 0D 0A
```

Return: ACK.

```
02 01 06 03 06 0D 0A
```

Return again after calibration finished: ACK

```
02 01 06 03 06 0D 0A
```

Example 2: set the calibration level as 113.8dB and calibrate by measurement.

```
02 01 43 43 41 4C 31 31 33 2E 38 03 28 0D 0A
```

Return: ACK.

```
02 01 06 03 06 0D 0A
```

Return again after calibration finished: ACK

```
02 01 06 03 06 0D 0A
```

3.12 CAL?: Query Calibration Level and Calibration Factor

	Instruction			Parameters
Explanation	MEM			Query parameter: ?
ASCII	C	A	L	?
Hex	43H	41H	4CH	3FH
Byte	1	1	1	1
Return	Return the value of the calibration level and calibration factor			

Example: query the calibration level and calibration factor.

```
02 01 43 43 41 4C 3F 03 32 0D 0A
```

Return: the current calibration level is 094.0dB, the calibration factor is 000.00dB.

```
02 01 41 30 39 34 2E 30 2C 2B 30 30 30 2E 30 30 03 7B 0D 0A
```

3.13 CAFp1: Calibrate by Calibration Factor

This instruction can modify the calibration factor. In the calibration history, code "F" at the end of each line means by calibration factor.

	Instruction			Parameters
Explanation	CAF			p1: Calibration factor; Range: -199.99~+199.99 ("+" sign can be omitted); Default: 0
ASCII	C	A	F	0
Hex	43H	41H	46H	30H
Byte	1	1	1	1~7
Return	ACK / NAK			

Example: set the calibration factor value as 0.74dB ("+" sign is omitted).

```
02 01 43 43 41 46 30 2E 37 34 03 1A 0D 0A
```

Return: ACK.

```
02 01 06 03 06 0D 0A
```

3.14 CAF?: Query Calibration History

Query the most recent 4 group history of calibration.

	Instruction			Parameters
Explanation	CAF			Query parameter: ?
ASCII	C	A	F	?
Hex	43H	41H	46H	3FH
Byte	1	1	1	1
Return	Returns the most recent 4 group history of calibration. Format "Year/Month/day, hour:minute:second, calibration factor, code". Code: M=By Measurement, F=By Calibration Factor.			

Example: query the calibration history.

```
02 01 43 43 41 46 3F 03 38 0D 0A
```

Return: the data returned by this instruction use a slash "/" split date, use a colon ":", split time.
Calibration history is 2011/08/04, 17:03:28, +001.29, F, 2011/08/04, 17:03:02, +001.25, F, 2011/08/04, 17:02:20, +000.71, F, 2011/08/04, 17:02:00, +001.27, M.

```
02 01 41 32 30 31 31 2F 30 38 2F 30 34 2C 31 37 3A 30 33 3A 32 38 2C 2B  
30 30 31 2E 32 39 2C 46 2C 32 30 31 31 2F 30 38 2F 30 34 2C 31 37 3A 30  
33 3A 30 32 2C 2B 30 30 31 2E 32 35 2C 46 2C 32 30 31 31 2F 30 38 2F 30  
34 2C 31 37 3A 30 32 3A 32 30 2C 2B 30 30 30 2E 37 31 2C 46 2C 32 30 31  
31 2F 30 38 2F 30 34 2C 31 37 3A 30 32 3A 30 30 2C 2B 30 30 31 2E 32 37  
2C 4D 03 62 0D 0A
```

3.15 BSEp1_p2_p3_p4_p5_p6_p7: Measurement Setup

Set the delay, integral period, repeat, and logger setup.

	Instruction			P1	P2	P3	P4	P5	P6	P7
Explanation	BSE			p1: delay; 1~60=1~60s; 61=Sync. 1m; 62=Sync. 15m; 63=Sync. 30m; 64=Sync. 1h; Default: 1	p2: integral period; 0=Inf; 1~59=1~59s; 60~118=1~59m; 119~142=1h~24h; Default: 0	p3: repeat; 0=Inf; 1~9999=1~9999 times; Default: 0	p4: SWN logger; 0=disable; 1=enable; Default: 0	p5: SWN logger; step 0=0.1s; 1=0.2s; 2=0.5s; 3~61=1~59s; 62~120=1~59m; 121~144=1h~24h; Default: 3	p6: CSD logger; 0=disable; 1=enable; Default: 0	p7: CSD logger; 0~58=1~59s; 59~117=1~59m; 118~141=1~24h; Default: 59
	ASCII	B	S	E	1	0	0	0	3	0

Hex	42	53	45	31H	30H	30H	30H	33H	30H	35H, 39H
Byte	1	1	1	1~2	1~3	1~4	1	1~3	1	1~2
Return	Returns: 0=setting succeed, MicroSD card is OK; 1=setting succeed, but the MicroSD card is abnormal; 2=setting succeed, but no MicroSD card detected.									

Example: set delay as 2s, integral period as 5m, repeat as infinite, SWN logger enable, SWN logger step as 0.2s, CSD logger enable, CSD logger step as 2s.

```
02 01 43 42 53 45 32 20 36 34 20 30 20 31 20 31 20 31 20 31 03 17 0D 0A
```

Returns: setting succeeds, MicroSD card is OK.

```
02 01 41 30 03 71 0D 0A
```

3.16 BSE?: Query Measurement Setup

	Instruction			Parameters
Explanation	BSE			Query parameter: ?
ASCII	B	S	E	?
Hex	42H	53H	45H	3FH
Byte	1	1	1	1
Return	Return parameter of measurement setup: delay, integral period, repeat, SWN logger, SWN logger step, CSD Logger, CSD Logger step.			

Example: query the measurement setup.

```
02 01 43 42 53 45 3F 03 28 0D 0A
```

Returns: the current measurement setup: delay=2s, integral period=5min, repeat=infinite, SWN logger=enable, SWN logger step= 0.2s, CSD logger=enable, CSD logger step=2s.

```
02 01 41 30 32 2C 30 36 34 2C 30 30 30 30 2C 31 2C 30 30 31 2C 31 2C 30
30 31 03 71 0D 0A
```

3.17 RNS?: Query Measurement Range

	Instruction			Parameters
Explanation	RNG			Query parameter: ?
ASCII	R	N	S	?
Hex	52H	4EH	53H	3FH
Byte	1	1	1	1
Return	Return measurement range			

Example: query measurement range.

```
02 01 43 52 4E 53 3F 03 33 0D 0A
```

Return: linearity, dynamic and peak C range is 22.8-133.8, 12.8-133.8, 44.8-136.8.

```
02 01 41 30 32 32 2E 38 7E 31 33 33 2E 38 2C 30 31 32 2E 38 7E 31 33 33
2E 38 2C 30 34 34 2E 38 7E 31 33 36 2E 38 03 38 0D 0A
```

3.18 ICPp1: Set ICCP Power

	Instruction			Parameters
Explanation	ICP			p1: ICCP power state; 0=Enable; 1=Disable; Default: 0
ASCII	I	C	P	0
Hex	49H	43H	50H	30H
Byte	1	1	1	1
Return	ACK / NAK			

Example: enable ICCP power:

```
02 01 43 49 43 50 30 03 29 0D 0A
```

Return: ACK.

```
02 01 06 03 06 0D 0A
```

3.19 ICP?: Query ICCP Power State

	Instruction			Parameters
Explanation	ICP			Query parameter: ?
ASCII	I	C	P	?
Hex	49H	43H	50H	3FH
Byte	1	1	1	1
Return	Return ICCP power state			

Example: query ICCP power state

```
02 01 43 49 43 50 3F 03 26 0D 0A
```

Return: ICCP power is enable

```
02 01 41 30 03 71 0D 0A
```


3.20 PR1p1_p2_p3_p4: Set Profile1

	Instruction			P1	P2	P3	P4
Explanation	PR1			p1: Filter; 0=A; 1=B; 2=C;	p2: Detector; 0=Fast; 1=Slow; 2=Imp;	p3: Integration mode; 0=SPL; 1=PEAK;	p4: SWN Logger; 0=LEQ; 1=PEAK;
				3=Z; Default: 0	Default: 0	2=LEQ; 3=MAX; 4=MIN; Default: 0	2=MAX; 3=MIN; Default: 0
ASCII	P	R	1	0	0	0	0
Hex	50H	52H	31H	30H	30H	30H	30H
Byte	1	1	1	1	1	1	1
Return	ACK / NAK						

Example: set Profile1 as A, Fast, SPL and save LEQ.

```
02 01 43 50 52 31 30 20 30 20 30 03 50 0D 0A
```

Return: ACK.

```
02 01 06 03 06 0D 0A
```

3.21 PR1?: Query Profile1 Setting

	Instruction			Parameters
Explanation	PR1			Query parameter: ?
ASCII	P	R	1	?
Hex	50H	52H	31H	3FH
Byte	1	1	1	1
Return	Return Profile1 setting			

Example: query Profile1 setting.

```
02 01 43 50 52 31 3F 03 4F 0D 0A
```

Return: current Profile1 setting is A, Fast, SPL, save LEQ.

```
02 01 41 30 2C 30 2C 30 2C 30 03 6D 0D 0A
```

3.22 PR2p1_p2_p3_p4: Set Profile2

Except the instruction is "PR2" and the default filter is 2 (C-weighting), all others are same to the "PR1".



3.23 PR2?: Query Profile2 Setting

Except the instruction is “PR2”, all others are same to the “PR1?”.

3.24 PR3p1_p2_p3_p4: Set Profile3

Except the instruction is “PR3” and the default filter is 3 (Z-weighting), all others are same to the “PR1?”.

3.25 PR3?: Query Profile3 Setting

Except the instruction is “PR3”, all others are same to the “PR1?”.

3.26 ALMp1: Set Alarm Threshold

	Instruction			Parameters
Explanation	ALM			p1: Alarm threshold; Range: 20~200; Default: 100
ASCII	A	L	M	100
Hex	41H	4CH	4DH	31H, 30H, 30H
Byte	1	1	1	1~3
Return	ACK / NAK			

Example: setting alarm threshold as 100dB.

```
02 01 43 41 4C 4D 31 30 30 03 32 0D 0A
```

Return: ACK.

```
02 01 06 03 06 0D 0A
```

3.27 ALM?: Query the Alarm Threshold Setting

	Instruction			Parameters
Explanation	ALM			Query parameter: ?
ASCII	A	L	M	?
Hex	41H	4CH	4DH	3FH
Byte	1	1	1	1
Return	Return alarm threshold			

Example: query alarm threshold.

```
02 01 43 41 4C 4D 3F 03 3C 0D 0A
```

Return: the current alarm threshold is 100dB.

```
02 01 41 31 30 30 03 70 0D 0A
```

3.28 ETFp1_p2_p3_p4_p5: Set Extended Function

	Instruction			P1	P2	P3	P4	P5
Explanation	ETF			p1: 3Profile Screen; 0=Disable; 1=Enable	p2: Statistical Screen; 0=Disable; 1=Enable	p3: Time History Screen; 0=Disable; 1=Enable	p4: Custom Screen; 0=Disable; 1=Enable	p5: GPS Screen; 0=Disable; 1=Enable
ASCII	E	T	F	1	1	1	1	1
Hex	45H	54H	46H	31H	31H	31H	31H	31H

Byte	1	1	1	1	1	1	1	1
Return	ACK / NAK							

Example: enable 3Profile, statistical, time history, custom, GPS.

```
02 01 43 45 54 46 31 20 31 20 31 20 31 20 31 03 25 0D 0A
```

Return: ACK

```
02 01 06 03 06 0D 0A
```

3.29 ETF?: Query Extended Function Setting

	Instruction			Parameters
Explanation	ETF			Query parameter: ?
ASCII	E	T	F	?
Hex	45H	54H	46H	3FH
Byte	1	1	1	1
Return	Return the extended function setting			

Example: query the extended function setting

```
02 01 43 45 54 46 3F 03 2B 0D 0A
```

Return: 3Profile, statistical, time history, custom and GPS are all enable

```
02 01 41 31 2C 31 2C 31 2C 31 2C 31 03 70 0D 0A
```

3.30 STSp1_p2_p3.....p11_p12: Set Statistical

	Instruction			P1	P2	P3-P12
Explanation	STS			p1: Filter 0=A; 1=B; 2=C; 3=Z; Default: 0	p2: Detector 0=F; 1=S; 2=I; Default: 0	p3~p12: statistical percentage; Range: 1~99; Default: 10, 20, 30, 40, 50, 60, 70, 80, 90, 99
ASCII	S	T	S	0	0	10_20_30_40_50_ 60_70_80_90_99
Hex	53H	54H	53H	30H	30H	31H, 30H, 20H, 32H, 30H, 20H, 33H, 30H, 20H, 34H, 30H, 20H, 35H, 30H, 20H, 35H, 30H, 20H, 36H, 30H, 20H, 37H, 30H, 20H, 38H, 30H, 20H, 39H, 30H, 20H, 39H, 39H
Byte	1	1	1	1	1	10~20+9 (spaces)
Return	ACK / NAK					

Example: set filter as B, detector as I, percentage as 10, 20, 30, 40, 50, 60, 70, 80, 90 and 99.

```
02 01 43 53 54 53 31 20 32 20 31 30 20 32 30 20 33 30 20 34 30 20 35 30 20 36 30
20 37 30 20 38 30 20 39 30 20 39 39 03 35 0D 0A
```

Return: ACK.

```
02 01 06 03 06 0D 0A
```

3.31 STS?: Query Statistical

	Instruction			Parameters
Explanation	STS			Query parameter: ?
ASCII	S	T	S	?
Hex	53H	54H	53H	3FH
Byte	1	1	1	1
Return	Return filter, detector and 10 percentage of statistical			

Example: query statistical

```
02 01 43 53 54 53 3F 03 28 0D 0A
```

Return: filter=B, detector=I, percentage=10, 20, 30, 40, 50, 60, 70, 80, 90, 99.

```
02 01 41 31 2C 32 2C 31 30 2C 32 30 2C 33 30 2C 34 30 2C 35 30 2C 36 30
2C 37 30 2C 38 30 2C 39 30 2C 39 39 03 6F 0D 0A
```

3.32 HISp1_p2: Set Time History

	Instruction			Parameters 1	Parameters 2
Explanation	HIS			p1: Profile; 0=Profile1; 1=Profile2; 2=Profile3; Default: 1	p2: Duration; 0=1min; 1=2min; 2=10min; Default: 1
ASCII	H	I	S	1	1
Hex	48H	49H	53H	31H	31H
Byte	1	1	1	1	1
Return	ACK / NAK				

Example: set Profile2 as data sources and duration as 2min.

02 01 43 **48 49 53 31** 20 31 03 31 0D 0A

Return: ACK.

02 01 06 03 06 0D 0A

3.33 HIS?: Query Time History Setting

	Instruction			Parameters
Explanation	HIS			Query parameter: ?
ASCII	H	I	S	?
Hex	48H	49H	53H	3FH
Byte	1	1	1	1
Return	Return time history setting			

Example: query time history setting.

02 01 43 **48 49 53 3F** 03 2E 0D 0A

Returns: the current data sources=Profile2, duration=2min.

02 01 41 **31 2C 31** 03 6D 0D 0A

3.35 OCS?: Query Octave Setting

Explanation	Instruction			Parameters
	OCS			Query parameter: ?
ASCII	O	C	S	?
Hex	4FH	43H	53H	3FH
Byte	1	1	1	1
Return	Return octave setting			

Example: query octave setting.

```
02 01 43 4F 43 53 3F 03 23 0D 0A
```

Returns: return Filter and threshold of LeqA, LeqB, LeqC, LeqZ, 6.3Hz-20kHz. For example:

Filter is C-weighting, threshold are LeqA=038.1; LeqB=038.2; LeqC=038.3; LeqZ=038.4;
 6.3Hz=038.1; 8Hz=038.2; 10Hz=038.3; 12.5Hz=038.4; 16Hz=038.5; 20Hz=038.6;
 25Hz=038.7; 31.5Hz=038.8; 40Hz=038.9; 50Hz=038.1; 63Hz=063.2; 80Hz=038.3;
 100Hz=038.4; 125Hz=052.5; 160Hz=038.6; 200Hz=038.7; 250Hz=044.8; 315Hz=038.9;
 400Hz=038.1; 500Hz=038.2; 630Hz=038.3; 800Hz=038.4; 1kHz=038.5; 1.25kHz=038.6;
 1.6kHz=038.7; 2kHz=038.8; 2.5kHz=038.9; 3.15kHz=038.1; 4kHz=038.2; 5kHz=038.3;
 6.3kHz=038.4; 8kHz=038.5; 10kHz=038.6; 12.5kHz=038.7; 16kHz=038.8; 20kHz=038.9

```
02 01 41 31 2C 30 33 38 2E 31 2C 30 33 38 2E 32 2C 30 33 38 2E 33 2C 30
33 38 2E 34 2C 30 33 38 2E 31 2C 30 33 38 2E 32 2C 30 33 38 2E 33 2C 30
33 38 2E 34 2C 30 33 38 2E 35 2C 30 33 38 2E 36 2C 30 33 38 2E 37 2C 30
33 38 2E 38 2C 30 33 38 2E 39 2C 30 33 38 2E 31 2C 30 36 33 2E 32 2C 30
33 38 2E 33 2C 30 33 38 2E 34 2C 30 35 32 2E 35 2C 30 33 38 2E 36 2C 30
33 38 2E 37 2C 30 34 34 2E 38 2C 30 33 38 2E 39 2C 30 33 38 2E 31 2C 30
```

```
33 38 2E 32 2C 30 33 38 2E 33 2C 30 33 38 2E 34 2C 30 33 38 2E 35 2C 30
33 38 2E 36 2C 30 33 38 2E 37 2C 30 33 38 2E 38 2C 30 33 38 2E 39 2C 30
33 38 2E 31 2C 30 33 38 2E 32 2C 30 33 38 2E 33 2C 30 33 38 2E 34 2C 30
33 38 2E 35 2C 30 33 38 2E 36 2C 30 33 38 2E 37 2C 30 33 38 2E 38 2C 30
33 38 2E 39 03 7D 0D 0A
```

3.36 CUSp1_p2_p3_p4: Set Custom Measure

	Instruction			P1	P2	P3	P4								
Explanation	CUS			p1: Group; Range: 1~14	p2: Filter; 0=A; 1=B; 2=C; 3=Z	p3: Detector; 0=Fast; 1=Slow; 2=Imp.	p4: Mode; 0=SPL; 1=SD; 2=SEL; 3=E; 4=Max; 5=Min; 6=Peak; 7=LEQ; 8=LN1; 17=LN10								
								ASCII	C	U	S	1	0	0	0
								Hex	43H	55H	53H	31H	30H	30H	30H
								Byte	1	1	1	1~2	1	1	1~2
								Return	ACK / NAK						

Example: set custom measurement of group 1 to B-weighting, Fast, Peak.

02 01 43 43 55 53 31 20 31 20 30 20 36 03 20 0D 0A

Return: ACK

02 01 06 03 06 0D 0A

Default value of each group in custom measurement (parameter with * is actually useless):

	Filter	Detector	Mode	Meaning
Custom 1	0	0	7	A, Fast*, LEQ
Custom 2	0	0	8	A*, Fast*, LN1
Custom 3	0	0	12	A*, Fast*, LN5
Custom 4	0	0	16	A*, Fast*, LN 9
Custom 5	0	0	4	A, Fast, Max
Custom 6	0	0	5	A, Fast, Min
Custom 7	0	0	1	A, Fast, SD
Custom 8	0	0	0	A, Fast, SPL
Custom 9	1	0	0	B, Fast, SPL
Custom 10	2	0	0	C, Fast, SPL
Custom 11	3	0	0	Z, Fast, SPL
Custom 12	0	0	2	A, Fast*, SEL
Custom 13	0	0	3	A, Fast*, E
Custom 14	2	0	6	C, Fast*, Peak

3.37 CUSp1_?: Query Custom Measure Setting

	Instruction			P1	P2
Explanation	CUS			p1: Group 1~14	Query parameter: ?
ASCII	C	U	S	1	?
Hex	43H	55H	53H	31H	3FH
Byte	1	1	1	1~2	1
Return	Return custom measure setting				

Example: query custom measure settings of group 12.

```
02 01 43 43 55 53 31 32 20 3F 03 1A 0D 0A
```

Return: the setting of group 12 is A-weighting, Fast, E.

```
02 01 41 31 32 2C 30 2C 30 2C 30 33 03 6D 0D 0A
```

3.38 TISp1_p2_p3_p4_p5: Set Timer

	Instruction			P1	P2	P3	P4	P5
Explanation	TIS			P1: Switch; 0=OFF; 1=ON; Default: 0	p2: Start Day; 0=Ignore; 1~31= 1~31 day form today; Default: 0	p3: Start hour; 0~23= 0~23h; Default: 12	p4: Start minute; 0~59= 0~59m; Default: 0	P5: Repeat period; 1~59= 1~59m; 60~83= 1~24h; Default: 1
ASCII	T	I	S	0	0	12	0	1
Hex	54H	49H	53H	30H	30H	31H, 32H	30H	31H
Byte	1	1	1	1	1	1~2	1~2	1~2
Return	ACK / NAK							

Example: set the Timer as switch: ON, start day: Ignore, start hour: 12:00, repeat period: 1m.

```
02 01 43 54 49 53 31 20 30 20 31 32 20 30 20 31 03 0E 0D 0A
```

Return: ACK

```
02 01 06 03 06 0D 0A
```

3.39 TIS?: Query Timer Setting

	Instruction			Parameters
Explanation	TIS			Query parameter: ?
ASCII	54H	49H	53H	?
Hex	1	1	1	3FH
Byte	54H	49H	53H	1
Return	Return Timer setting			

Example: query Timer setting.

```
02 01 43 54 49 53 3F 03 32 0D 0A
```

Return: Timer setting is switch=OFF, start day=ignore, Start Time=12:00, Repeat period=1m.

```
02 01 41 30 2C 30 30 2C 31 32 3A 30 30 2C 30 31 03 65 0D 0A
```

3.40 CONp1: Set Contrast

	Instruction			Parameters
Explanation	CON			p1: Contrast; Range:0~14; Default: 7
ASCII	C	O	N	7
Hex	43H	4FH	4EH	37H
Byte	1	1	1	1
Return	ACK / NAK			

Example: set the contrast as 9.

```
02 01 43 43 4F 4E 39 03 38 0D 0A
```

Return: ACK

```
02 01 06 03 06 0D 0A
```

3.41 CON?: Query Contrast Setting

	Instruction			Parameters
Explanation	CON			Query parameter: ?
ASCII	C	O	N	?
Hex	43H	4FH	4EH	3FH
Byte	1	1	1	1
Return	Return contrast setting			

Example: query contrast setting

```
02 01 43 43 4F 4E 3F 03 3E 0D 0A
```

Returns: the current contrast is 7

```
02 01 41 30 37 03 46 0D 0A
```

3.42 BLTp1_p2: Set Backlight

	Instruction			Parameter 1	Parameter 2
Explanation	BLT			p1: TimeOut; 0=ON, Auto shut down; 1=OFF, Never turn off; Default: 0	p2: Delay; 0=10s; 1=20s; 2=30s; 3=40s; 4=50s; 5=60s; Default: 0
ASCII	B	L	T	0	0
Hex	42H	4CH	54H	30H	30H
Byte	1	1	1	1	1
Return	ACK / NAK				

Example: set backlight as timeout: ON, delay: 20s

```
02 01 43 42 4C 54 30 20 31 03 38 0D 0A
```

Return: ACK

```
02 01 06 03 06 0D 0A
```

3.43 BLT?: Query Backlight Setting

	Instruction			Parameters
Explanation	BLT			Query parameter: ?
ASCII	B	L	T	?
Hex	42H	4CH	54H	3FH
Byte	1	1	1	1
Return	Return backlight settings			

Example: query the backlight settings

```
02 01 43 42 4C 54 3F 03 26 0D 0A
```

Return: the current backlight setting is timeout=OFF, delay=20s (delay is useless when backlight timeout is OFF)

```
02 01 41 31 2C 31 03 6D 0D 0A
```

3.44 BAT?: Query Battery State

	Instruction			Parameters
Explanation	BAT			Query parameter: ?
ASCII	B	A	T	?
Hex	42H	41H	54H	3FH
Byte	1	1	1	1
Return	Returns the power state and supply voltage Power state: 0=Battery; 1=External power; 2=USB power Supply voltage: xx.xx V			

Example: query battery state

```
02 01 43 42 41 54 3F 03 2B 0D 0A
```

Returns: the current battery state is external power supply, supply voltage is 9.24V

```
02 01 41 31 2C 30 39 2E 32 34 03 7D 0D 0A
```

3.45 TRGp1: Set Trigger

	Instruction			Parameters
Explanation	TRG			p1: Trigger switch; 0=OFF; 1=ON; Default: 0
ASCII	T	R	G	0
Hex	54H	52H	47H	30H
Byte	1	1	1	1
Return	ACK / NAK			

Example: set trigger as OFF

```
02 01 43 54 52 47 30 03 32 0D 0A
```

Return: ACK

```
02 01 06 03 06 0D 0A
```

3.46 TRG?: Query Trigger Setting

	Instruction			Parameters
Explanation	TRG			Query parameter: ?
ASCII	T	R	G	?
Hex	54H	52H	47H	3FH
Byte	1	1	1	1
Return	Return Trigger settings			

Example: query trigger setting

02 01 43 **54 52 47 3F** 03 3D 0D 0A Returns:

the current trigger setting is OFF

02 01 41 **30** 03 71 0D 0A

3.47 DATp1_p2_p3_p4: Set Date

	Instruction			P1	P2	P3	P4
Explanation	DAT			p1: Date format; 0=Year/Month/Day; 1=Month/Day/Year; 2=Day/Year/Month; Default: 0	p2: Year; Range: 2000~2999	p3: Month; Range: 1~12	p4: Day; Range: 1~31
ASCII	D	A	T	0	2011	1	1
Hex	44H	41H	54H	30H	32H, 30H 31H, 31H	31H	31H
Byte	1	1	1	1	4	1~2	1~2
Return	ACK / NAK						

Example: set the date format as year/month/day, date: 5th August 2011

02 01 43 **44 41 54 30 20 32 30 31 31 20 38 20 35** 03 0D 0D 0A

Return: ACK

02 01 06 03 06 0D 0A

3.48 DAT?: Query Date Setting

	Instruction			Parameters
Explanation	DAT			Query parameter: ?
ASCII	D	A	T	?
Hex	44H	41H	54H	3FH
Byte	1	1	1	1
Return	Return date setting			

Example: query date

02 01 43 **44 41 54 3F** 03 2D 0D 0A

Return: the current date format=year/month/day, date=5th August 2011

02 01 41 **30 2C 32 30 31 31 2F 30 38 2F 30 35** 03 52 0D 0A

3.49 HORp1_p2_p3: Set Time

	Instruction			P1	P2	P3
Explanation	HOR			p1: Hour; Range: 0~23h	p2: Minute; Range: 0~59m	p3: Second; Range: 0~59s
ASCII	H	O	R	1	1	1
Hex	48H	4FH	52H	31H	31H	31H
Byte	1	1	1	1~2	1~2	1~2
Return	ACK / NAK					

Example: set the time as 18:37:30

02 01 43 **48 4F 52 31 38 20 33 37 20 33 30** 03 18 0D 0A

Return: ACK

02 01 06 03 06 0D 0A

3.50 HOR?: Query Time Setting

	Instruction			Parameters
Explanation	HOR			Query parameter: ?
ASCII	H	O	R	?
Hex	48H	4FH	52H	3FH
Byte	1	1	1	1
Return	Return time settings			

Example: query time setting

02 01 43 **48 4F 52 3F** 03 29 0D 0A

Returns: the current time is 18:37:48

02 01 41 **31 38 3A 33 37 3A 34 38** 03 40 0D 0A

3.51 PWOp1: Set Auto Power Off

	Instruction			Parameters
Explanation	PWO			p1: Auto power off time; 0=1min; 1=5min; 2=10min; 3=30min; 4=OFF; Default: 4
ASCII	P	W	O	4
Hex	50H	57H	4FH	34H
Byte	1	1	1	1
Return	ACK / NAK			

Example: set auto power off as OFF

```
02 01 43 50 57 4F 34 03 3F 0D 0A
```

Return: ACK

```
02 01 06 03 06 0D 0A
```

3.52 PWO?: Query Auto Power Off Setting

	Instruction			Parameters
Explanation	PWO			Query parameter: ?
ASCII	P	W	O	?
Hex	50H	57H	4FH	3FH
Byte	1	1	1	1
Return	Return auto power off settings			

Example: query auto power off settings

```
02 01 43 50 57 4F 3F 03 34 0D 0A
```

Returns: the current auto power off setting is OFF

```
02 01 41 34 03 75 0D 0A
```

3.53 OPMp1: Set Boot Mode

	Instruction			Parameters
Explanation	OPM			p1: Boot mode; 0=Normal; 1=Power & Boot; 2=Boot & Auto Measure; Default: 0
ASCII	O	P	M	0
Hex	4FH	50H	4DH	30H
Byte	1	1	1	1
Return	ACK / NAK			

Example: set bott mode as normal

02 01 43 **4F 50 4D 30** 03 21 0D 0A

Return: ACK

02 01 06 03 06 0D 0A

3.54 OPM?: Query Boot Mode Setting

	Instruction			Parameters
Explanation	OPM			Query parameter: ?
ASCII	O	P	M	?
Hex	4FH	50H	4DH	3FH
Byte	1	1	1	1
Return	Return boot mode setting			

Example: query boot mode

02 01 43 **4F 50 4D 3F** 03 2E 0D 0A Return:

the current boot mode is normal

02 01 41 **30** 03 71 0D 0A

3.55 UMDp1: Set USB Mode

	Instruction			Parameters
Explanation	UMD			p1: USB Mode; 0=Always Ask; 1=U Disk Mode; 2=Modem Mode; Default: 0
ASCII	U	M	D	0
Hex	55H	4DH	44H	30H
Byte	1	1	1	1
Return	ACK / NAK			

Example: set to modem mode

```
02 01 43 55 4D 44 32 03 2D 0D 0A
```

Return: ACK

```
02 01 06 03 06 0D 0A
```

3.56 UMD?: Query USB Mode Setting

	Instruction			Parameters
Explanation	UMD			Query parameter: ?
ASCII	U	M	D	?
Hex	55H	4DH	44H	3FH
Byte	1	1	1	1
Return	Return USB mode setting			

Example: query USB mode setting

```
02 01 43 55 4D 44 3F 03 20 0D 0A
```

Return: the current USB mode is modem mode

```
02 01 41 32 03 73 0D 0A
```

3.57 GPDp1_p2: Set GPS

	Instruction			P1	P2
Explanation	GPD			p1: GPS switch; 0=OFF; 1=ON; Default: 0	p2: Auto time sync; 0=OFF; 1=ON; Default: 0
ASCII	G	P	D	0	0

Hex	47H	50H	44H	30H	30H
Byte	1	1	1	1	1
Return	ACK / NAK				

Example: set GPS as switch: ON, auto time sync: ON

```
02 01 43 47 50 44 31 20 31 03 30 0D 0A
```

Return: ACK

```
02 01 06 03 06 0D 0A
```

3.58 GPD?: Query GPS Setting

	Instruction			Parameters
Explanation	GPD			Query parameter: ?
ASCII	G	P	D	?
Hex	47H	50H	44H	3FH
Byte	1	1	1	1
Return	Return GPS setting			

Example: query GPS setting

```
02 01 43 47 50 44 3F 03 2D 0D 0A
```

Returns: the current GPS setting is switch=ON, auto time sync=ON

```
02 01 41 31 2C 31 03 6F 0D 0A
```

3.59 VER?: Query About Information

	Instruction			Parameters
Explanation	VER			Query parameter: ?
ASCII	V	E	R	?
Hex	56H	45H	52H	3FH
Byte	1	1	1	1
Return	Return the about information			

Example: query about information

```
02 01 43 56 45 52 3F 03 3D 0D 0A
```

Returns: type=309S, class=2, S/N=490001, version=3.00.141020, HWID=P0274.03.B11

```
02 01 41 33 30 39 53 2C 32 2C 34 39 30 30 30 31 2C 33 2E 30 30 2E 31 34
31 30 32 30 2C 50 30 32 37 34 2E 30 33 2E 42 31 31 03 33 0D 0A 03 70 0D
0A
```

3.60 LNGp1: Set Language

	Instruction			Parameters
Explanation	LNG			p1: Language selection; 0=English; 1=Chinese; 2=Portuguese; 3=Spanish; 4=German; 5=French; Default: 0
ASCII	L	N	G	0
Hex	4CH	4EH	47H	30H
Byte	1	1	1	1
Return	ACK / NAK			

Example: set the language as Chinese

```
02 01 43 4C 4E 47 31 03 37 0D 0A
```

Return: ACK

```
02 01 06 03 06 0D 0A
```

3.61 LNG?: Query Language Setting

	Instruction			Parameters
Explanation	LNG			Query parameter: ?
ASCII	L	N	G	?
Hex	4CH	4EH	47H	3FH
Byte	1	1	1	1
Return	Return the language setting			

Example: query language setting

02 01 43 **4C 4E 47 3F** 03 39 0D 0A Returns:

the current language is Chinese

02 01 41 **31** 03 70 0D 0A

3.62 OUTp1_p2_p3_p4: Set Output

	Instruction			P1	P2	P3	P4
Explanation	OUT			p1: Filter of SLM; 0=A; 1=B; 2=C; 3=Z; Default: 0	p2: Detector of SLM; 0=Fast; 1=Slow; 2=Imp.; Default: 0	p3: Mode of SLM; 0=SPL; 1=LEQ; 2=Peak; Default: 0	p4: Output of Octave; 0=LAEq; 1=LBeq; 2=LCeq; 3=LZeq; 4~39=6.3Hz~20kHz; Default: 0
ASCII	O	U	T	0	0	0	0
Hex	4FH	55H	54H	30H	30H	30H	30H
Byte	1	1	1	1	1	1	1~2
Return	ACK / NAK						

Example: set the output to A-weighting, Fast, SPL for SLM. Set the output to LAeq for Octave

02 01 43 **4F 55 54 30 20 30 20 30 20** 30 03 2D 0D 0A

Return: ACK

02 01 06 03 06 0D 0A

3.63 OUT?: Query Output Setting

	Instruction			Parameters
Explanation	OUT			Query parameter: ?
ASCII	O	U	T	?
Hex	4FH	55H	54H	3FH
Byte	1	1	1	1
Return	Return output setting			

Example: query output setting

```
02 01 43 4F 55 54 3F 03 32 0D 0A
```

Return: the output for SLM=A-weighting, Fast, SPL. For Octave=LAeq

```
02 01 41 30 2C 30 2C 30 2C 30 03 6D 0D 0A
```

3.64 RES: Apply Factory Settings

	Instruction			Parameters
Explanation	RES			None
ASCII	R	E	S	None
Hex	52H	45H	53H	None
Byte	1	1	1	None
Return	ACK / NAK			

Example: apply the factory settings

```
02 01 43 52 45 53 03 07 0D 0A
```

Return: ACK. Wait at least 6 seconds after receipt of ACK

```
02 01 06 03 06 0D 0A
```

3.65 STAp1: Start / Stop Measurement

	Instruction			Parameters
Explanation	STA			p1: Start / Stop measurement; 0=Stop; 1=Start
ASCII	S	T	A	1
Hex	53H	54H	41H	31H
Byte	1	1	1	1
Return	ACK / NAK			

Example: start measurement

```
02 01 43 53 54 41 31 03 34 0D 0A
```

Return: ACK

```
02 01 06 03 06 0D 0A
```

3.66 STA?: Query Measurement State

	Instruction			Parameters
Explanation	STA			Query parameter: ?
ASCII	S	T	A	?
Hex	53H	54H	41H	3FH
Byte	1	1	1	1
Return	Return measurement state			

Example: query the measurement state

```
02 01 43 53 54 41 3F 03 3A 0D 0A
```

Returns: the measurement state is start (running)

```
02 01 41 31 03 70 0D 0A
```

Note: The following instructions are to query the sound level meter measurements data.

They contain the "return manner" parameter, it means:

Stop return: The sound level meter no longer to return measurements data every second after received this instruction.

Single return: The sound level meter will return the measurements data on time after received the instruction.

Continuous return: Automatically return the measurements data every second after received the instruction.

Therefore, the "return manner" parameter in the instruction can be set to 2 and send to the sound level meter, sound level meter will return the latest measurements data every second.

3.67 DMAp1_?: Query the Main Screen Data

	Instruction			P1	P2
Explanation	DMA			p1:Return manner 0=Stop return 1=Single return 2=Continuous return	Query parameter: ?
ASCII	D	M	A	1	?
Hex	44H	4DH	41H	31H	3FH
Byte	1	1	1	1	1
Return	Return the main screen data Filter: 0=A, 1=B, 2=C, 3=Z Detector: 0=Fast, 1=Slow, 2=Imp. Mode: 0=SPL, 1=PEAK, 2=LEQ, 3=MAX, 4=MIN Measurement data: The value of the main screen				

Example: query the data of the main screen, and return only once

```
02 01 43 44 4D 41 31 20 3F 03 25 0D 0A
```

Returns: the current main screen is: B-weighting, Slow, measurement data 066.1dB

```
02 01 41 31 2C 31 2C 32 2C 30 36 36 2E 31 03 70 0D 0A
```

3.68 TPRp1_?: Query 3-Profile Screen Data

	Instruction			P1	P2
Explanation	TPR			p1: Return manner; 0=Stop return; 1=Single return; 2=Continuous return	Query parameter: ?
ASCII	T	P	R	1	?
Hex	54H	50H	52H	31H	3FH
Byte	1	1	1	1	1
Return	Return 3-Profile screen data Profile 1: Filter, Detector, Mode, Data Profile 2: Filter, Detector, Mode, Data Profile 3: Filter, Detector, Mode, Data				

Example: query 3-Profile screen data

```
02 01 43 54 50 52 31 20 3F 03 3B 0D 0A
```

Returns: the current 3-Profile screen data: profile 1: B-weighting, LEQ, 066.1dB; profile 2: C-weighting, Fast, SPL, 067.1dB; profile 3: Z-weighting, Fast, SPL, 067.4dB

```
02 01 41 31 2C 31 2C 32 2C 30 36 36 2E 31 2C 32 2C 30 2C 30 2C 30 36 37 2E 31 03 74 0D 0A
```

3.69 DLNp1_?: Query Statistical Analysis Data (LN)

	Instruction			P1	P2
Explanation	DLN			p1: Return manner; 0=Stop return;	Query parameter: ?
				1=Single return; 2=Continuous return	
ASCII	D	L	N	1	?
Hex	44H	4CH	4EH	31H	3FH
Byte	1	1	1	1	1
Return	Return statistical analysis (LN) data Filter: 0=A, 1=B, 2=C, 3=Z Detector: 0=Fast, 1=Slow, 2=Imp. Mode: 0=SPL Group 1 LN percentages and LN statistics Group 10 LN percentages and LN statistics				

Example: query statistical analysis (LN) data

```
02 01 43 44 4C 4E 31 20 3F 03 2B 0D 0A
```

Returns: the current statistical analysis data is: A-weighting, Fast, SPL, LN10=065.4dB, LN20=065.4dB, LN30=065.4dB, LN40=065.3dB, LN50=065.3dB, LN60=065.3dB, LN70=035.2dB, LN80=065.2dB, LN 90=065.2dB, LN99=065.1dB

```
02 01 41 30 2C 30 2C 30 2C 31 30 2C 30 36 35 2E 34 2C 32 30 2C 30 36 35
2E 34 2C 33 30 2C 30 36 35 2E 34 2C 34 30 2C 30 36 35 2E 33 2C 35 30 2C
30 36 35 2E 33 2C 36 30 2C 30 36 35 2E 33 2C 37 30 2C 30 36 35 2E 32 2C
38 30 2C 30 36 35 2E 32 2C 39 30 2C 30 36 35 2E 32 2C 39 39 2C 30 36 35
2E 31 2C 03 58 0D 0A
```


3.70 DCU?: Query Custom Measure Data

	Instruction			P1	P2
Explanation	DCU			p1: Return manner; 0=Stop return; 1=Single return; 2=Continuous return	Query parameter: ?
ASCII	D	C	U	1	?
Hex	44H	43H	55H	31H	3FH
Byte	1	1	1	1	1
Return	Return custom measure data: Group 1 Filter, Detector, Mode, Data Group 14 Filter, Detector, Mode, Data				

Example: query custom measure data

```
02 01 43 44 43 55 31 20 3F 03 3F 0D 0A
```

Returns: the current custom measure data: Group 0: A-weighting, Fast*, L10, 065.4dB; Group 1: A-weighting, Fast*, L20, 065.4dB; Group 2: A-weighting, Fast*, L60, 065.3dB; Group 3: A-weighting, Fast*, L99, 065.1dB; Group 4: A-weighting, Fast, Min, 064.4dB; Group 5: A-weighting, Fast*, Peak, 081.9dB; Group 6: A-weighting, Fast, Sel, 083.8dB; Group 7: A-weighting, Fast, SPL, 065.3dB; Group 8: B-weighting, Fast, SPL, 066.4dB; Group 9: A-weighting, Fast, SD, 005.6dB; Group 10: B-weighting, Fast, SD, 007.2dB; Group 11: A-weighting, Fast*, E, 2.696E-05dB; Group 12: A-weighting, Fast, Max, 65.5dB; Group 13: B-weighting, Fast*, Leq, 066.2dB. **Note:** Parameters with * are useless

```
02 01 41 30 2C 30 2C 30 38 2C 30 36 35 2E 34 2C 30 2C 30 2C 30 39 2C 30
36 35 2E 34 2C 30 2C 30 2C 31 33 2C 30 36 35 2E 33 2C 30 2C 30 2C 31 37
2C 30 36 35 2E 31 2C 30 2C 30 2C 30 35 2C 30 36 34 2E 34 2C 30 2C 30 2C
30 36 2C 30 38 31 2E 39 2C 30 2C 30 2C 30 32 2C 30 38 33 2E 38 2C 30 2C
30 2C 30 30 2C 30 36 35 2E 33 2C 31 2C 30 2C 30 30 2C 30 36 36 2E 34 2C
30 2C 30 2C 30 31 2C 30 30 35 2E 36 2C 31 2C 30 2C 30 31 2C 30 30 37 2E
32 2C 30 2C 30 2C 30 33 2C 32 2E 36 39 36 65 2D 30 35 2C 30 2C 30 2C 30
34 2C 30 36 35 2E 35 2C 31 2C 30 2C 30 37 2C 30 36 36 2E 32 03 2F 0D 0A
```

3.71 DSLp1_p2_?: Query All the Data of the Sound Level Meter

	Instruction			P1	P2	P3
Explanation	DSL			p1: Data group; 0=SPL; 1=SD; 2=SEL; 3=E; 4=Max; 5=Min; 6=Peak; 7=Leq; 8=LN	p2: Return manner; 0=Stop return; 1=Single return; 2=Continuous return	Query parameter: ?
ASCII	D	S	L	0	1	?
Hex	44H	53H	4CH	30H	31H	3FH
Byte	1	1	1	1	1	1
Return	Return the corresponding group data: Group 0: LAF, LAS, LAI, LBF, LBS, LBI, LCF, LCS, LCI, LZf, LZS, LZI Group 1: LAFsd, LASsd, LAIsd, LBFsd, LBSsd, LBIsd, LCFsd, LCSsd, LCIsd, LZfsd, LZSsd, LZIsd Group 2: LAseL, LBseL, LCseL, LZseL Group 3: LAe, LBe, LCe, LZe Group4: LAFmax, LASmax, LAImax, LBFmax, LBSmax, LBImax, LCFmax, LCSmax, LCImax, LZfmax, LZSmax, LZImax Group 5: LAFmin, LASmin, LAImin, LBFmin, LBSmin, LBImin, LCFmin, LCSmin, LCImin, LZfmin, LZSmin, LZImin Group 6: LApeak, LBpeak, LCpeak, LZpeak Group 7: LAeq, LBeq, LCEq, LZeq Group 8: Percentage values and statistics of ten LN					

Example: query group 7 (LEQ)

02 01 43 **44 53 4C 37 20 31 20** 3F 03 21 0D 0A

Returns: the LEQ data: LAeq=065.0dB, LBeq=066.2dB; LCEq=067.0dB; LZeq=067.2dB

02 01 41 **30 36 35 2E 30 2C 30 36 36 2E 32 2C 30 36 37 2E 30 2C 30 36 37 2E 32 03 6E 0D 0A**

3.72 DOT?: Query 1/1 Octave Band Data

	Instruction			P1	P2
Explanation	DOT			p1: Return manner; 0=Stop return; 1=Single return; 2=Continuous return;	Query parameter: ?
ASCII	D	O	T	1	?
Hex	44H	4FH	54H	31H	3FH
Byte	1	1	1	1	1
Return	Return 1/1 octave band data: Filter, LAeq, LBeq, LCeq, LZeq, 8Hz, 16Hz, 31.5Hz, 63Hz, 125Hz, 250Hz, 500Hz, 1kHz, 2kHz, 4kHz, 8kHz, 16kHz				

Example: query 1/1 octave data

```
02 01 43 44 4F 54 31 20 3F 03 32 0D 0A
```

Returns: the current 1/1 octave band filter is C-weighting, and data are: LAeq=064.7dB, LBeq=066.0dB, LCeq=066.8dB, LZeq=067.1dB, 8Hz=030.7dB, 16Hz=041.6dB, 31.5Hz=048.4dB, 63Hz=053.9dB, 125Hz=056.8dB, 250Hz=059.5dB, 500Hz=060.8dB, 1kHz=060.3dB, 2kHz=057.8dB, 4kHz=053.6dB, 8kHz=047.0dB, 16kHz=035.4dB

```
02 01 41 31 2C 30 36 34 2E 37 2C 30 36 36 2E 30 2C 30 36 36 2E 38 2C 30  
36 37 2E 31 2C 30 33 30 2E 37 2C 30 34 31 2E 36 2C 30 34 38 2E 34 2C 30  
35 33 2E 39 2C 30 35 36 2E 38 2C 30 35 39 2E 35 2C 30 36 30 2E 38 2C 30  
36 30 2E 33 2C 30 35 37 2E 38 2C 30 35 33 2E 36 2C 30 34 37 2E 30 2C 30  
33 35 2E 34 03 7F 0D 0A
```

3.73 DTT?: Query 1/3 Octave Band Data

	Instruction			P1	P2
Explanation	DTT			p1: Return manner; 0=Stop return; 1=Single return; 2=Continuous return;	Query parameter: ?
ASCII	D	T	T	1	?
Hex	44H	54H	54H	31H	3FH
Byte	1	1	1	1	1
Return	Return 1/3 octave band data: Filter, LAeq, LBeq, LCeq, LZeq, 6.3Hz, 8Hz, 10Hz, 12.5Hz, 16Hz, 20Hz, 25Hz, 31.5Hz, 40Hz, 50Hz, 63Hz, 80Hz, 100Hz, 125Hz, 160Hz, 200Hz, 250Hz, 315Hz, 400Hz, 500Hz, 630Hz, 800Hz, 1kHz, 1.25kHz, 1.6kHz, 2kHz, 2.5kHz, 3.15kHz, 4kHz, 5kHz, 6.3kHz, 8kHz, 10kHz, 12.5kHz, 16kHz, 20kHz				

Example: query 1/3 octave band data.

```
02 01 43 44 54 54 31 20 3F 03 00 0D 0A
```

Return: current Filter is C-weighting, LAeq=064.8dB, LBeq=066.0dB, LCeq=066.9dB, LZeq=067.1dB, 6.3Hz=017.8dB, 8Hz=023.5dB, 10Hz=028.0dB, 12.5Hz=032.2dB, 16Hz=035.4dB, 20Hz=038.4dB, 25Hz=041.0dB, 31.5Hz=043.6dB, 40Hz=045.9dB, 50Hz=047.0dB, 63Hz=048.5dB, 80Hz=049.8dB, 100Hz=050.9dB, 125Hz=052.1dB, 160Hz=053.0dB, 200Hz=054.1dB, 250Hz=054.7dB, 315Hz=055.5dB, 400Hz=055.9dB, 500Hz=056.2dB, 630Hz=056.3dB, 800Hz=056.1dB, 1kHz=055.6dB, 1.25kHz=054.9dB, 1.6kHz=054.2dB, 2kHz=053.0dB, 2.5kHz=051.8dB, 3.15kHz=050.4dB, 4kHz=048.8dB, 5kHz=046.9dB, 6.3kHz=044.6dB, 8kHz=041.8dB, 10kHz=038.1dB, 12.5kHz=033.3dB, 16kHz=026.2dB, 20kHz=015.0dB

```
02 01 41 31 2C 30 36 34 2E 38 2C 30 36 36 2E 30 2C 30 36 36 2E 39 2C 30
36 37 2E 31 2C 30 31 37 2E 38 2C 30 32 33 2E 35 2C 30 32 38 2E 30 2C 30
33 32 2E 32 2C 30 33 35 2E 34 2C 30 33 38 2E 34 2C 30 34 31 2E 30 2C 30
34 33 2E 36 2C 30 34 35 2E 39 2C 30 34 37 2E 30 2C 30 34 38 2E 35 2C 30
34 39 2E 38 2C 30 35 30 2E 39 2C 30 35 32 2E 31 2C 30 35 33 2E 30 2C 30
35 34 2E 31 2C 30 35 34 2E 37 2C 30 35 35 2E 35 2C 30 35 35 2E 39 2C 30
35 36 2E 32 2C 30 35 36 2E 33 2C 30 35 36 2E 31 2C 30 35 35 2E 36 2C 30
35 34 2E 39 2C 30 35 34 2E 32 2C 30 35 33 2E 30 2C 30 35 31 2E 38 2C 30
35 30 2E 34 2C 30 34 38 2E 38 2C 30 34 36 2E 39 2C 30 34 34 2E 36 2C 30
34 31 2E 38 2C 30 33 38 2E 31 2C 30 33 33 2E 33 2C 30 32 36 2E 32 2C 30
31 35 2E 30 03 72 0D 0A
```

3.74 CSD: Save Custom Data into MicroSD

	Instruction			Parameters
Explanation	CSD			None
ASCII	C	S	D	None
Hex	43H	53H	44H	None
Byte	1	1	1	None
Return	Return state: 0= Stored successfully, MicroSD OK; 1= Failure to store, MicroSD error; 2=No MicroSD.			

Example: Save CSD

```
02 01 43 43 53 44 03 17 0D 0A
```

Return: save successfully, MicroSD OK

```
02 01 41 30 03 71 0D 0A
```



PCE Instruments contact information

Germany

PCE Deutschland GmbH
Im Langel 4
D-59872 Meschede
Deutschland
Tel.: +49 (0) 2903 976 99 0
Fax: +49 (0) 2903 976 99 29
info@pce-instruments.com
www.pce-instruments.com/deutsch

France

PCE Instruments France EURL
23, rue de Strasbourg
67250 SOULTZ-SOUS-FORETS
France
Téléphone: +33 (0) 972 3537 17
Numéro de fax: +33 (0) 972 3537 18
info@pce-france.fr
www.pce-instruments.com/french

Spain

PCE Ibérica S.L.
Calle Mayor, 53
02500 Tobarra (Albacete)
España
Tel. : +34 967 543 548
Fax: +34 967 543 542
info@pce-iberica.es
www.pce-instruments.com/espanol

United States of America

PCE Americas Inc.
711 Commerce Way suite 8
Jupiter / Palm Beach
33458 FL
USA
Tel: +1 (561) 320-9162
Fax: +1 (561) 320-9176
info@pce-americas.com
www.pce-instruments.com/us

United Kingdom

PCE Instruments UK Ltd
Units 12/13 Southpoint Business Park
Ensign Way, Southampton
Hampshire
United Kingdom, SO31 4RF
Tel: +44 (0) 2380 98703 0
Fax: +44 (0) 2380 98703 9
info@industrial-needs.com
www.pce-instruments.com/english

Italy

PCE Italia s.r.l.
Via Pesciatina 878 / B-Interno 6
55010 LOC. GRAGNANO
CAPANNORI (LUCCA)
Italia
Telefono: +39 0583 975 114
Fax: +39 0583 974 824
info@pce-italia.it
www.pce-instruments.com/italiano

The Netherlands

PCE Brookhuis B.V.
Institutenweg 15
7521 PH Enschede
Nederland
Telefoon: +31 (0)53 737 01 92
Fax: +31 53 430 36 46
info@pcebenelux.nl
www.pce-instruments.com/dutch

Chile

PCE Instruments Chile S.A.
RUT: 76.154.057-2
Santos Dumont 738, local 4
Comuna de Recoleta, Santiago, Chile
Tel. : +56 2 24053238
Fax: +56 2 2873 3777
info@pce-instruments.cl
www.pce-instruments.com/chile

Hong Kong

PCE Instruments HK Ltd.
Unit J, 21/F., COS Centre
56 Tsun Yip Street
Kwun Tong
Kowloon, Hong Kong
Tel: +852-301-84912
jyi@pce-instruments.com
www.pce-instruments.cn

China

PCE (Beijing) Technology Co.,Ltd
1519 Room, 6 Building
Men Tou Gou Xin Cheng,
Men Tou Gou District
102300 Beijing
China
Tel: +86 (10) 8893 9660
info@pce-instruments.cn
www.pce-instruments.cn

Turkey

PCE Teknik Cihazları Ltd.Şti.
Halkalı Merkez Mah.
Pehlivan Sok. No.6/C
34303 Küçükçekmece - İstanbul
Türkiye
Tel: 0212 471 11 47
Faks: 0212 705 53 93
info@pce-cihazlari.com.tr
www.pce-instruments.com/turkish

Outdoor Decibel Meter Kit PCE-430-EKIT



Professional outdoor decibel meter PCE-430 (class 1) incl. outdoor noise level meter kit

Handheld noise meter and real-time frequency analyzer / Octave bandfilter / Filter upgradeable / Fast, Slow and Pulse Evaluation / Data logger /USB

The Class 1 outdoor decibel meter PCE-430-EKIT meets all requirements for noise measurement and frequency analysis. This integrated precision pulse decibel meter follows all valid standards and guidelines (Klasse 1 EN/IEC 61672, ANSI S1.4-1983, ANSI S1.43-1997 EN/IEC 61260, etc.) The outdoor decibel meter PCE-430 has a very large illuminated display. The decibel meter display adjusts the sound pressure level numerically and graphically in real time. The professional decibel meter has an integrated data logger. The measurement data is stored on a micro SD card.

This card can be read directly in the PC. Likewise, the outdoor decibel meter can be connected to the PC via USB and the memory can be read out. The post-processing software from the decibel meter allows convenient measurement data analysis. The typical applications for this instrument are the measurement of workplace noise, compliance, environmental noise detection, selection of hearing protector selection, selection of appropriate noise abatement measures and noise exposure estimation.

PCE-4xx-EKIT

An additional kit for outdoor sound measurement PCE-4xx-EKIT can be combined with the decibel meters PCE-428, 430 or PCE-432. This kit makes it possible to measure the outdoor noise with a noise meter over a long period of time. The environmental noise monitoring system consists of a waterproof Peli carrying case with rollers. A charger and two additional lead gel batteries are installed in this case, which allows an operation of the sound monitor for up to 10 days. During the outdoor sound measurement, the case may remain closed. Due to the external connections for the microphone and the power supply all electronic components are protected from water.

The delivery scope of the outdoor sound monitor includes rain and wind protection as well as a wire mesh for the microphone. Also, a tripod is available with which the microphone can be placed outdoors. Also, the charger in the measuring kit PCE-4xx-EKIT is waterproof. So, the charger may also remain outdoors. The outdoor noise meter can be used, for example, for the sound measurement of road noise, aircraft and train noise, event noise, etc. The weather does not matter, hail, snow and rain are no problem for the kit for outdoor noise. If the PCE-432 noise meter is combined with this measuring kit, it is even possible that the exact location of the sound level metering around the outside area is assigned via the GPS receiver.

The pulse function of the PCE-430 allows you to record short-term sound events. Thanks to the integrated octave band function even the smallest differences in the frequency band can be detected. The frequency filter can be optionally upgraded. The measuring range of this professional sound level meter ranges from 22 ... 136 db (A) at a frequency of 3 Hz ... 20 kHz.

Subject to change

- ▶ 1/1 octave band included
- ▶ 1/3 octave band optional
- ▶ Accuracy class 1
- ▶ A, B, C & Z frequency rating
- ▶ Fast, Slow, Pulse and Peak time weighting
- ▶ Statistics function
- ▶ Display of the sound profile as a graph
- ▶ 3 measuring profiles adjustable
- ▶ Low inherent noise
- ▶ ICCP microphone 40 mV /PA
- ▶ Alarm level adjustable

Subject to change

Specifications

Measuring range	22 ... 136 dbA
Accuracy	Class 1
Frequency range	3 Hz ... 20 kHz
Standards	GB/T3785.1-2010 GB/T3785.2-2010 IEC60651:1979 IEC60804:2000 IEC61672-1:2013 ANSI S1.4-1983 ANSI S1.43-1997
Frequency analysis	Octave band filter: 8 Hz ... 16 kHz 1/3 Octave band filter: 6.3 Hz ... 20 kHz
Microphone	1/2" measurement microphone class 1 Sensitivity: 40 mV/PA Frequency range: 3 Hz ... 20 kHz Connection: TNC Power supply: ICCP Standard
Data-logging interval	1 s ... 24 h (adjustable)
Measuring functions	LXY(SPL), LXeq, LXYSD, LXSEL, LXE, LXYmax, LXYmin, LXPeak, LXN. X = Frequency weighting: A, B, C, Z; Y = Time weighting: F, S, I; N = Statistics in %: 1 ... 99 %
24 hour measurement	Automatic measurement with data storage
Frequency weightings	A, B, C, Z
Time weightings	Fast (F), Slow (S), Pulse(I), Peak
Inherent noise	Microphone: 19 db(A), 25 db(C), 31 db(Z) Electronics: 13 db(A), 17 db(C), 24 db(Z)
AD converter	24 bit
Sample rate	Standard: 48 kHz LN mode: 20 ms
Measuring display	Numerical Bar graph Graphical
Display	160 x 160 pixel LCD with backlight
Memory	4 GB Micro SD card

More information

Manual P1



Manual P2



More product info



Similar products



Subject to change



Interface	USB (Memory readable via software or directly as mass storage) RS232
Voltage output	AC 5V RMS DC 10 mV/db
Alarm	Adjustable
Power supply	4 x 1.5 V AA batteries 12 V / 1 A power plug 5 V / 1 A USB
Operating time battery mode	min. 10 h
Dimensions	70 x 300 x 36 mm / 2.76 x 11.81 x 1.42" (W x H x D)
Weight	approx. 620 g / 1.4 lbs incl. batteries
Transport case	PELI 1510 with rollers with grid foam
Protection	IP65

Outdoor Noise Level MeterKit

Connections on the suitcase	Microphone: TNC 12 V charging voltage: XLR 110 V / 230 V charging voltage: PowerCon TRU
Charger	Victron Blue Smart 12 V / 4 A IP65
Internal batteries	2 x 12 V / 12 Ah lead gel
Battery running time	min. 10 days
Power supply	with charger EU Version: 180 ... 265 V AC with charger US Version: 100 ... 130 V AC battery operation: 2 x 12 V / 12 Ah
Cable length	Microphone cable: 2 m / 6 ft 6" with TNC connector Power supply: 2 m / 6 ft 6" with PowerCon TRU
Dimensions	56 x 35 x 23 cm / 2.2 x 1.3 x 0.9"
Weight	ca. 14 kg / 30 lb 13 oz with batteries ca. 8 kg / 17 lb 10 oz without batteries

Subject to change